Name and Function of Components


the hot residual matterials may be contained even when the temper-

ature, of the combustion chamber

Hot ashes may cause personal

is low.

injury of burn.

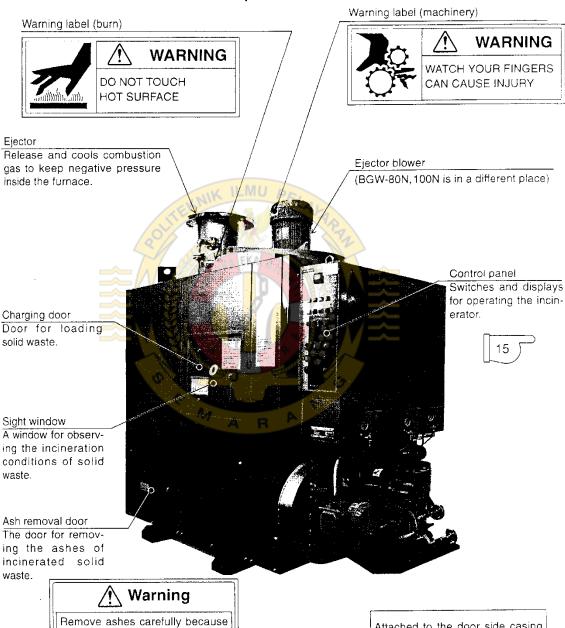


Attached to the door side casing

(1) Warning label (ash removal)

(2) Warning label (solid material)


(3) Note label (solid material)

(4) Operation label

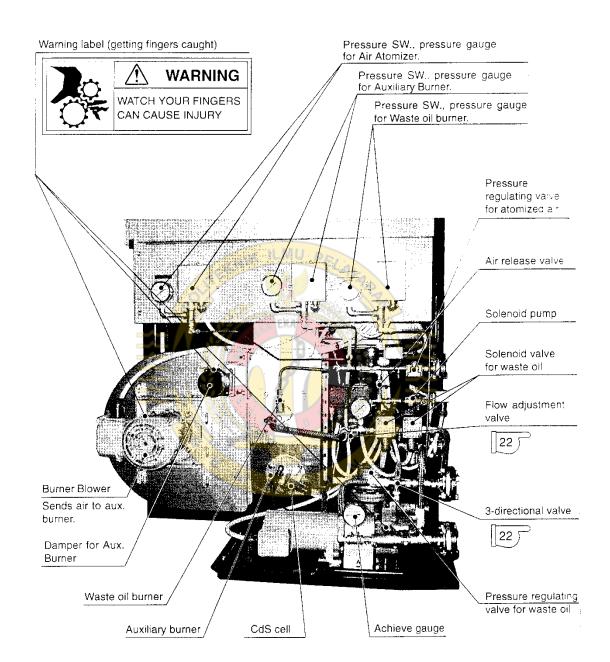


Instructions for operating equipment

Name and function of indicator

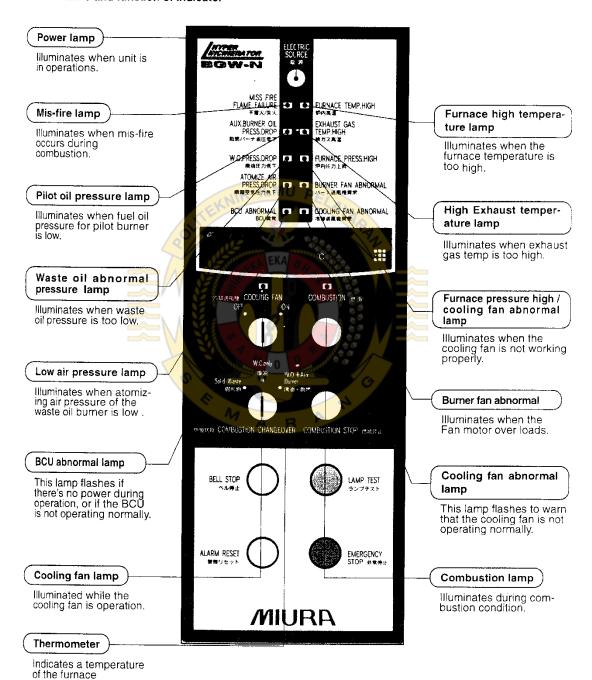


Ignition Burner

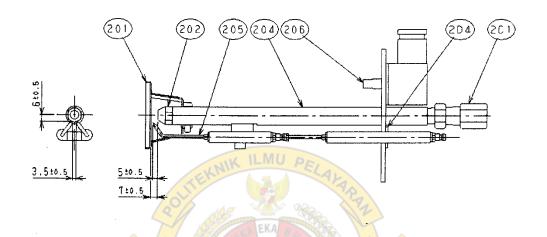

NO.	name	NO.	name
201	Baffle plate (complete)	206	CdS cell
202	Nozzle chip	201	Copper pipe fitting
204	Nozzle pipe (complete)	2C4	Insulator bushing
205	Spark rod		9

Nozzle chips, spark rods and insulator bushings wear out, so you should replace them once a year.

Burner

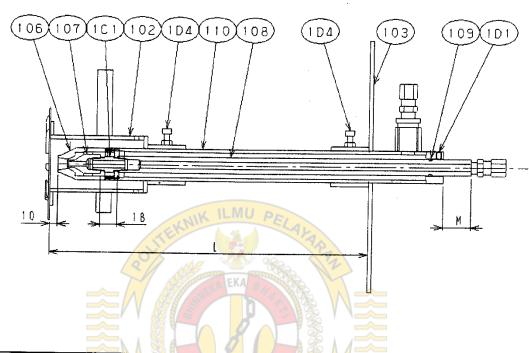

N 8	L-size	M-size
BGW-20N	0 253	33
BGW-30N	260	. 33
BGW-50N	320	27
BGW-80N	341	27
BGW-100N	361	27

No.	name	No.	name
102	Shroud	109	O ring
103	Burner lid	110	Casing
106	Nozzle case	1C1	Nipple
107	Waste oil nozzle	1D1	Set screw
108	Nozzle pipe	1D4	Set screw